





South Bay Foundry

WWW.SOUTHBAYFOUNDRY.COM



PHONE: (619) 956-2780 FAX: (619) 956-2788

DTF36-1.5RDCI

Ø36" TREE GRATE FRAME
STYLE "CI"
FOR NEW SLAB INSTALLATION

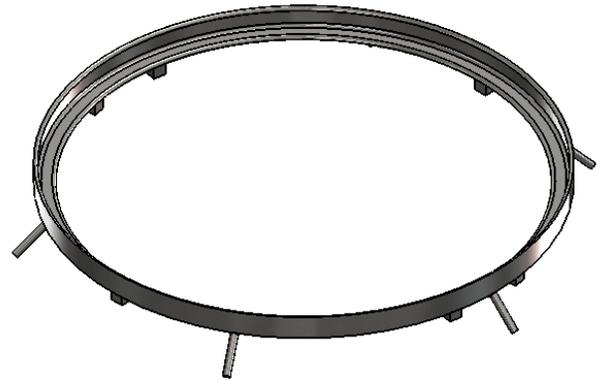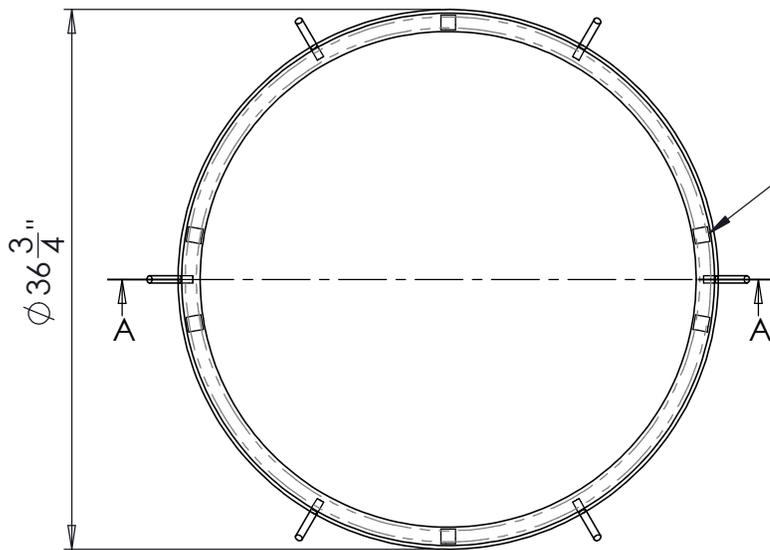

1" CUBE BOLT LUG
ON BOTTOM OF FRAME
TYP OF 6

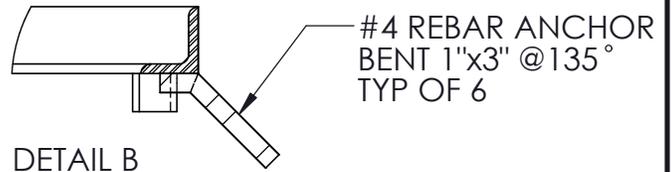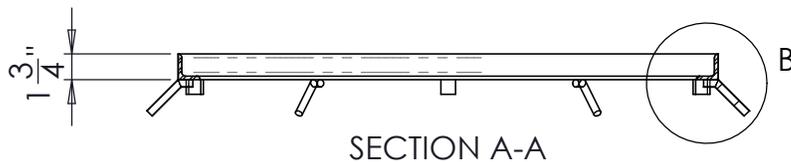

#4 REBAR ANCHOR
BENT 1"x3" @135°
TYP OF 6

IF TREE GRATE IS TO BE BOLTED TO TREE GRATE FRAME:
ORDER SBF ID#D00BD "BOLT DOWN KIT". EACH KIT CONTAINS:
(1) DRILL BIT
(1) TORX DRIVER BIT
(8) 1/4"-20x2" SELF-TAPPING FLAT HEAD SCREWS

WEIGHT	
PER SET	26 LB

INSTALLATION SEQUENCE (BY OTHERS):
1) ENSURE FRAME IS STRAIGHT AND SQUARE
2) POUR CONCRETE AROUND FRAME AND ALLOW TO CURE
3) PLACE TREE GRATE INSIDE FRAME. HOLES WILL BE PRE-DRILLED IN TREE GRATE FOR SCREWS.
4) DRILL EACH BOLT LUG IN FRAME THROUGH THE GRATE HOLES AND DRIVE SCREWS INTO HOLES.

GENERAL INFORMATION

*MATERIAL: STEEL ASTM A36
*FINISHES AVAILABLE: BARE, PAINTED, POWDER COATED, OR GALVANIZED

APPROVED

BY:

TITLE:

AGENCY:

DATE:

6/26/2013