





South Bay Foundry

WWW.SOUTHBAYFOUNDRY.COM


PHONE: (619) 956-2780 FAX: (619) 956-2788

DTF3636-1.5RF

36"x36" TREE GRATE FRAME
STYLE "RF"
FOR EXISTING SLAB INSTALLATION

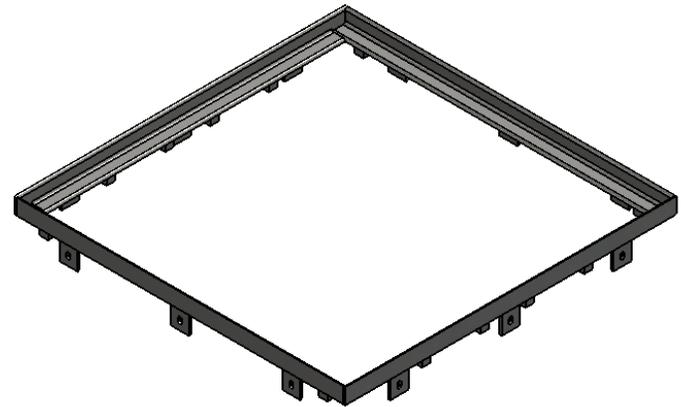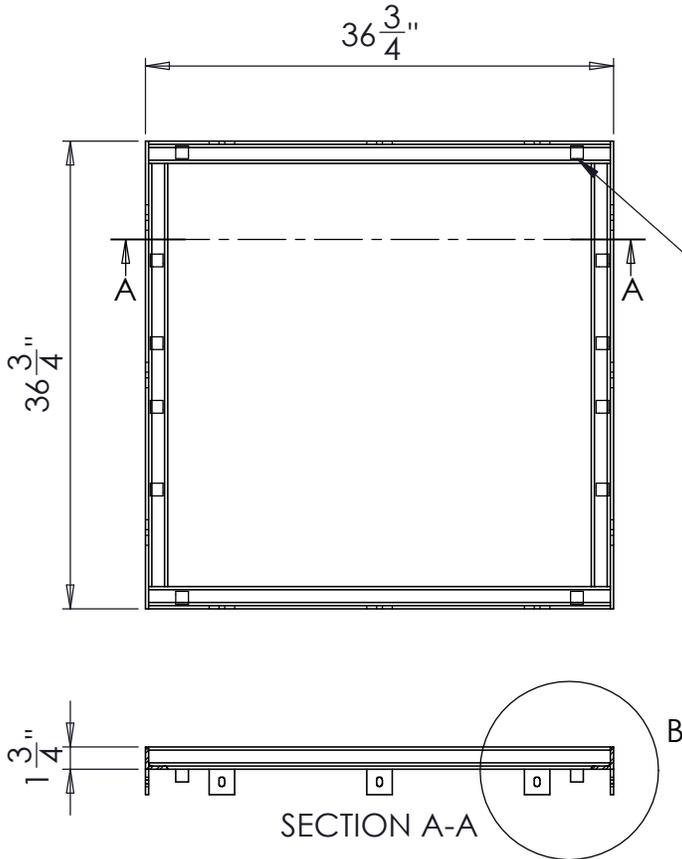

1" CUBE BOLT LUG
ON BOTTOM OF FRAME
TYP OF 12

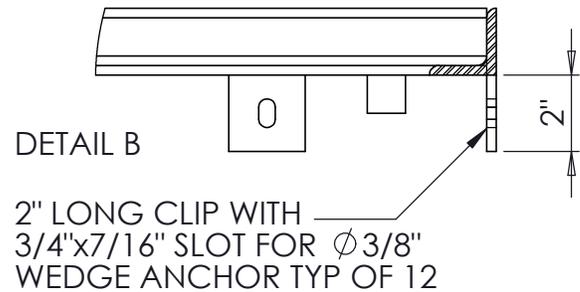

WEIGHT
39 LB

IF TREE GRATE IS TO BE BOLTED TO TREE GRATE FRAME:
ORDER SBF ID#D00BD "BOLT DOWN KIT". EACH KIT CONTAINS:

- (1) DRILL BIT
- (1) TORX DRIVER BIT
- (8) 1/4"-20x2" SELF-TAPPING FLAT HEAD SCREWS

INSTALLATION SEQUENCE (BY OTHERS):

- 1) ENSURE FRAME IS STRAIGHT AND SQUARE
- 2) PLACE TOP EDGE OF FRAME INSIDE TREE WELL FLUSH WITH SIDEWALK SURFACE.
- 3) BOLT FRAME TO EXISTING CONCRETE USING THE PROVIDED $\phi 3/8$ "x $2-1/4$ " WEDGE ANCHORS AT EVERY SLOTTED HOLE IN EACH ANCHOR TAB.
- 4) PLACE TREE GRATE INSIDE FRAME. HOLES WILL BE PRE-DRILLED IN TREE GRATE FOR SCREWS.
- 5) DRILL EACH BOLT LUG IN FRAME THROUGH THE GRATE HOLES AND DRIVE SCREWS INTO HOLES.

GENERAL INFORMATION

*MATERIAL: STEEL ASTM A36
*FINISHES AVAILABLE: BARE, PAINTED, POWDER COATED, OR GALVANIZED

APPROVED

BY:

TITLE:

AGENCY:

DATE:

6/21/2013