







South Bay Foundry

WWW.SOUTHBAYFOUNDRY.COM

PHONE: (619) 956-2780 FAX: (619) 956-2788

DTF48-1.5RDCI

Ø 48" TREE GRATE FRAME
STYLE "CI"
FOR NEW SLAB INSTALLATION

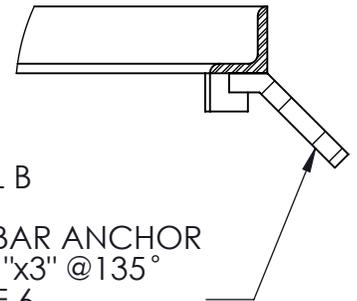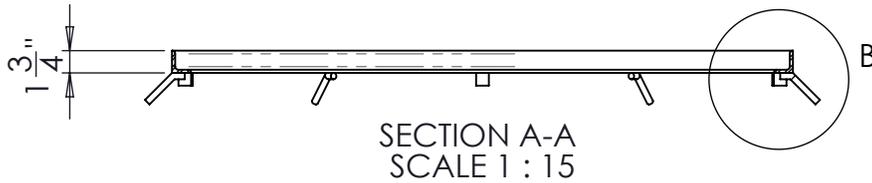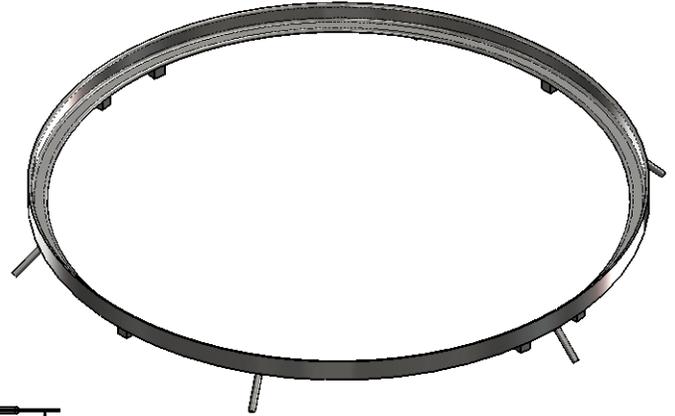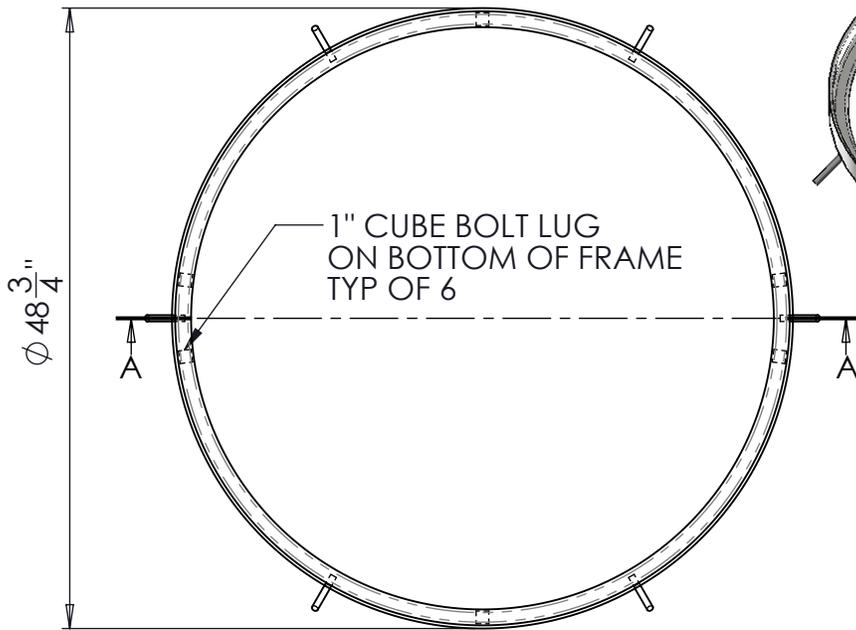

WEIGHT
34 LB

IF TREE GRATE IS TO BE BOLTED TO TREE GRATE FRAME:
ORDER SBF ID#D00BD "BOLT DOWN KIT". EACH KIT CONTAINS:

- (1) DRILL BIT
- (1) TORX DRIVER BIT
- (8) 1/4"-20x2" SELF-TAPPING FLAT HEAD SCREWS

INSTALLATION SEQUENCE (BY OTHERS):

- 1) ENSURE FRAME IS STRAIGHT AND SQUARE
- 2) POUR CONCRETE AROUND FRAME AND ALLOW TO CURE
- 3) PLACE TREE GRATE INSIDE FRAME. HOLES WILL BE PRE-DRILLED IN TREE GRATE FOR SCREWS.
- 4) DRILL EACH BOLT LUG IN FRAME THROUGH THE GRATE HOLES AND DRIVE SCREWS INTO HOLES.

GENERAL INFORMATION

*MATERIAL: STEEL ASTM A36
*FINISHES AVAILABLE: BARE, PAINTED, POWDER COATED, OR GALVANIZED

APPROVED

BY:

TITLE:

AGENCY:

DATE:

8/21/2013