




# South Bay Foundry

WWW.SOUTHBAYFOUNDRY.COM

PHONE: (619) 956-2780 FAX: (619) 956-2788

## DTF6096-1.5AP

60"x96" TREE GRATE FRAME  
STYLE "AP"  
FOR EXISTING PAVERS

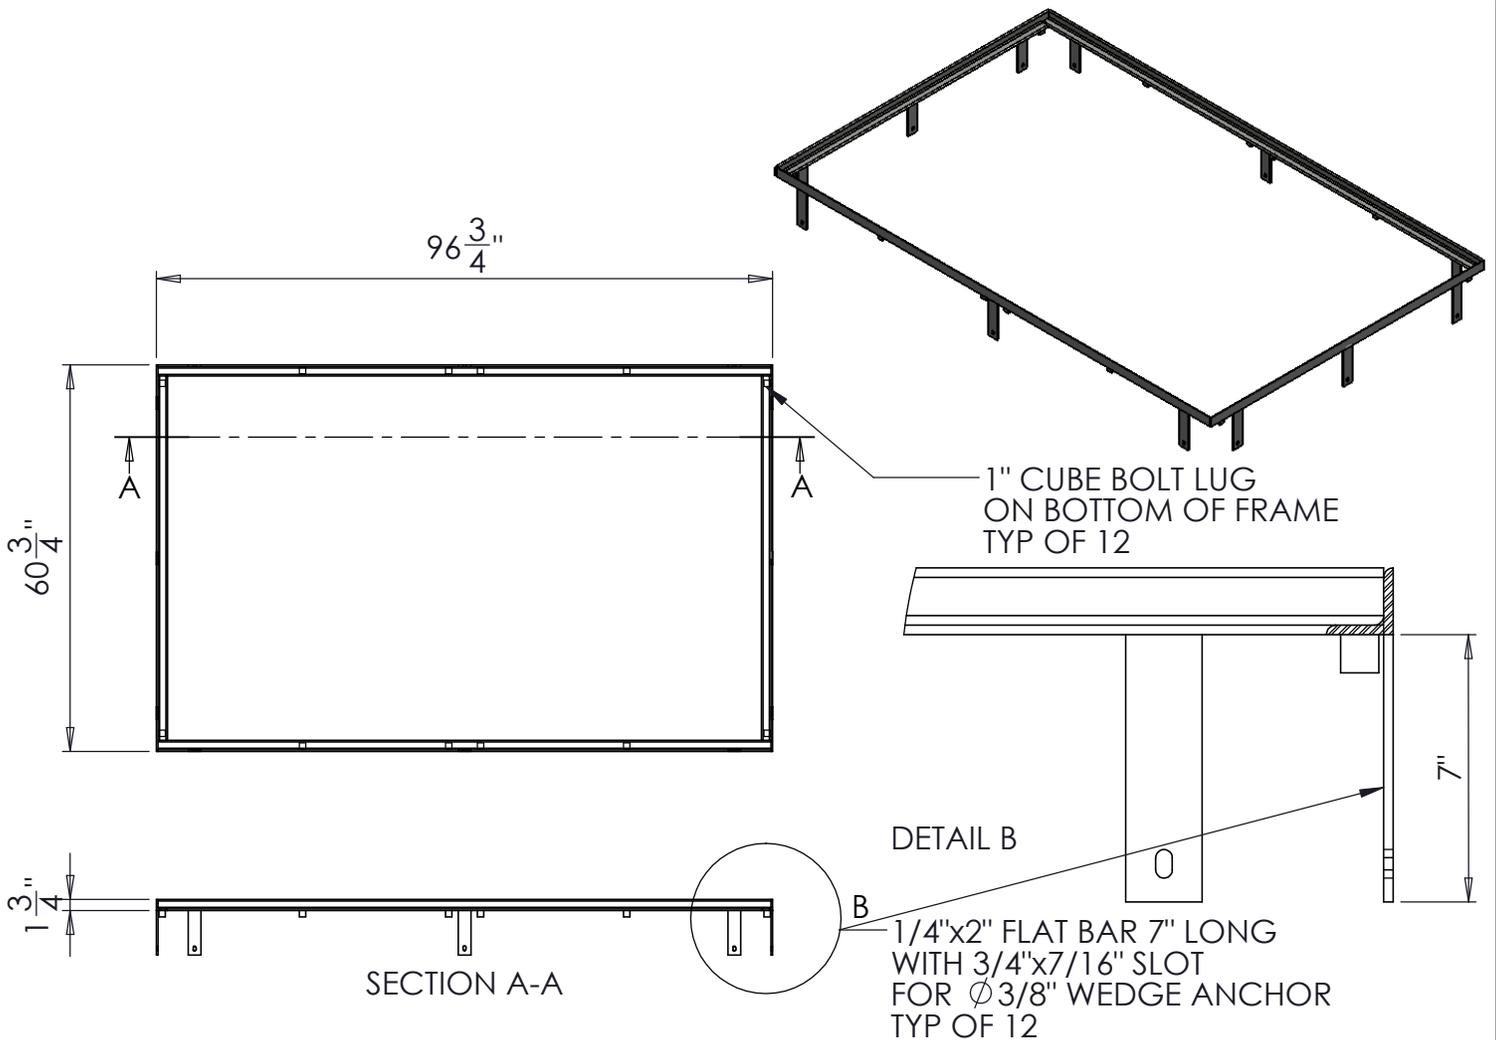

IF TREE GRATE IS TO BE BOLTED TO TREE GRATE FRAME:  
ORDER SBF ID#D00BD "BOLT DOWN KIT". EACH KIT CONTAINS:

- (1) DRILL BIT
- (1) TORX DRIVER BIT
- (8) 1/4"-20x2" SELF-TAPPING FLAT HEAD SCREWS

### WEIGHT

88 LB

#### INSTALLATION SEQUENCE (BY OTHERS):

- 1) ENSURE FRAME IS STRAIGHT AND SQUARE
- 2) PLACE TOP EDGE OF FRAME INSIDE TREE WELL FLUSH WITH SIDEWALK SURFACE.
- 3) BOLT FRAME TO EXISTING CONCRETE USING THE PROVIDED  $\phi$ 3/8"x2-1/4" WEDGE ANCHORS AT EVERY SLOTTED HOLE IN EACH ANCHOR TAB.
- 4) PLACE TREE GRATE INSIDE FRAME. HOLES WILL BE PRE-DRILLED IN TREE GRATE FOR SCREWS.
- 5) DRILL EACH BOLT LUG IN FRAME THROUGH THE GRATE HOLES AND DRIVE SCREWS INTO HOLES.

#### GENERAL INFORMATION

\*MATERIAL: STEEL ASTM A36

\*FINISHES AVAILABLE: BARE, PAINTED, POWDER COATED, OR GALVANIZED

#### APPROVED

BY:

TITLE:

AGENCY:

DATE:

6/21/2013